

Coway

Smart Extraction System
juicepresso
CJP-01



Enjoy the pure flavor and goodness of nature with **juice**presso Smart Extraction System

juice^{Smart Extraction System}presso gently presses to retrieve juice rather than forcing juice by shredding and grinding.

juice^{Smart Extraction System}presso is a newly developed patent technology which can retrieve juice not only from fruits and vegetables but from soy as well. **juice**^{Smart Extraction System}presso is also capable in making wheatgrass shot, ice cream, and so much more....

For better use and proper maintenance, please follow the instructions carefully. Please refer to user's manual when times of technical difficulties or unsure of the usage of this product. We are not liable for any injuries or damages that may occur due to the lack of understanding of the user's manual .

Contents

2 *page*
Attachment listing

4 *page*
Safety precaution

7 *page*
Assembly instruction
(type 1)

8 *page*
Assembly instruction
(type 2)

9 *page*
Assembly instruction
(type 1 and 2)

11 *page*
How to use
Juice presso



12 *page*
Warning while
operating

13 *page*
How to disassemble
and clean

14 *page*
Before requesting
service

16 *page*
Product specification

Attachment listing

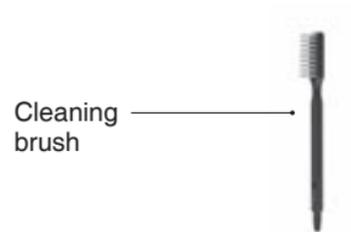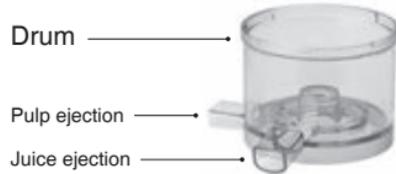

Attachment Listing

- Hopper (1EA)
- Squeezing Screw (1EA)
- Strainer(Yellow) -less pulp (1EA)
- Spinning Brush (1EA)
- Drum (1EA)
- Main Body (1EA)
- Container (1EA)
- Pusher (1EA)
- Cleaning brush (1EA)



IMPORTANT



As shown below, the hopper edge must point to "close" sign on the base in order for the machine to operate properly.

Safety precaution

For safety and proper use, please read every caution tips thoroughly before using the product.

Please do not plug or unplug electrical outlet with wet hands.

a. Can cause electricution.

Please do not force pull or push in the electrical plug, make sure the plug is distant from any heat source and is not bent or twisted in anyway.

a. Not doing so may cause fire damage and possible electricution.

When screw is stuck and does not spin, please turn off the machine and put in reverse for 2-3 seconds.

a. Not doing so may cause overheating which can lead to motor failure.

Please do not disassemble or move the machine while operating.

a. Not doing so may cause product damage.

Please plug in electrical plug properly.

a. Not doing so may cause fire damage.

Please do not put anything other than what is mentioned in the user's manual into product's openings.

a. Not doing so may cause physical damage, fire, or electricution.

Please do not use when electrical cord or plug is lose or damaged.

a. Not doing so may cause fire hazard or electricution.
b. Please consult to professional service technician.

Product is 14.109 pounds, please use both hands when picking up the machine.

a. Not doing so may cause physical damage.

Please do not use anything other 220 - 240 volts. Product is manufactured to CE electrical standards.

a. Not doing so may cause fire damage and possible electricution.

Please do not clean product with running water, when the product is wet; stop operating and request service to your purchased store or to toll free customer service number.

a. Not doing so may cause product damage.

Please do not disassemble the machine while operating nor put anything into juice or pulp vent while operating.

a. Not doing so may lead to product damage.

Please keep away from children's reach.

a. Mishandling or dropping the machine may cause product failure.

In case of any unusual odor, heat, or smoke, stop operating immediately and contact the nearest purchased store, retail center, or toll free customer service number.

Please do not move the machine while operating.

a. Not doing so may cause product damage.

Please do not clean under water that's over 80°C.

a. Not doing so may cause product damage and fire hazard.

When inputting materials into the hopper, please do not use anything other than the pusher.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Please do not use longer than 20 minutes, this product is for home use, excessive use can cause overheating which can lead to motor failure.

Please operate on a flat and steady surface.

a. Not doing so may cause product damage.

Please open all windows and doors for air ventilation when exposed to gas.

If the mains cord is damaged, you must have it replaced by coway, a service center authorised by coway or similarly qualified persons in order to avoid a hazard.

Please do not operate the machine when hopper is not assembled.

a. Not doing so may cause product damage.

Please do not drop or give impact to product.


a. Not doing so may cause product damage and fire hazard.

**Please contact customer service for technical difficulties.
Do not customize or upgrade machine without professional supervision.**

Children should be supervised to ensure that they do not play with the appliance.



Assembly instruction-Type 1

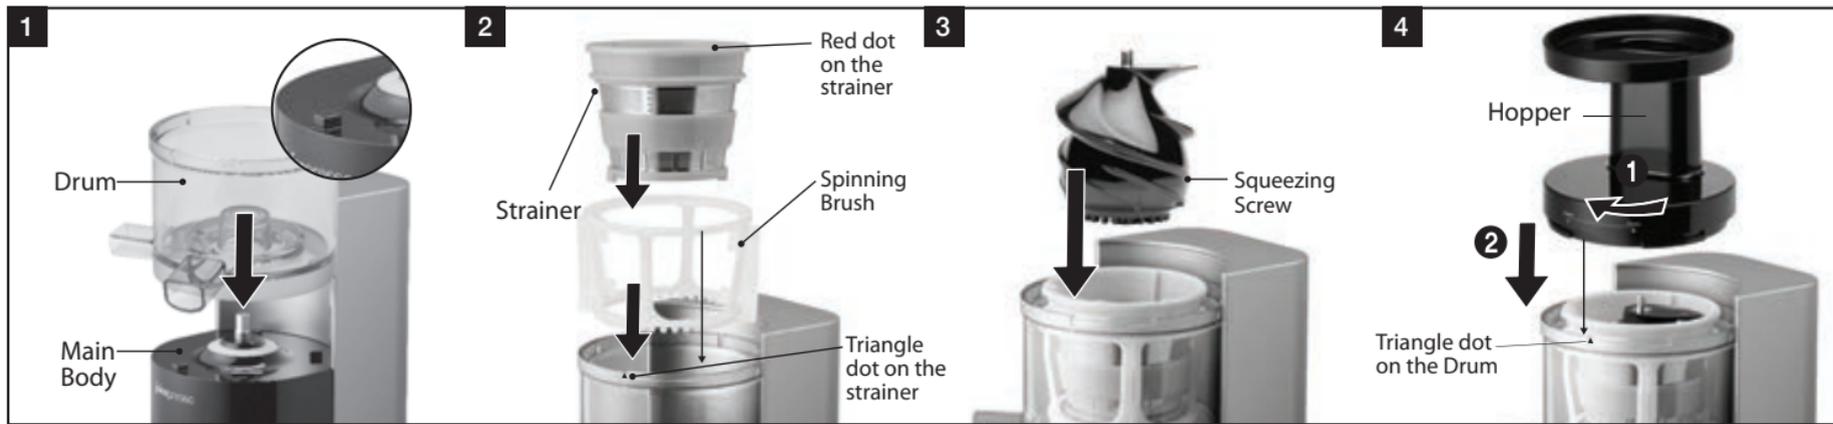

1. Assemble the Drum on the Main Body.

- ① Make sure the Drum is all the way into the shaft of the Main Base.
- ② Twist the Drum to close.

2. Assemble the strainer+spinning brush into the Drum.

- ① Make sure triangle dot and the black arrow is aligned.

3. Place the squeezing screw in the center of the Drum.


4. Assemble the hopper onto the Drum.

- ① Make sure the arrow on the hopper and the triangle dot on the Drum is aligned.
- ② Make sure the arrow on the hopper is pointing to closed sign on the Main Body.




Reverse the step carefully when disassembling.

Assembly instruction-Type 2

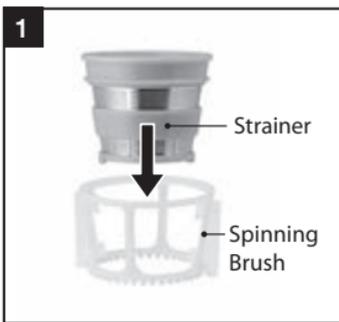


Place the strainer into the spinning brush.

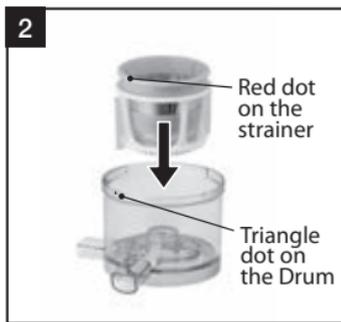


Place the strainer + spinning brush into the Drum.

① Make sure the red dot on the strainer and the triangle dot on the Drum is aligned.

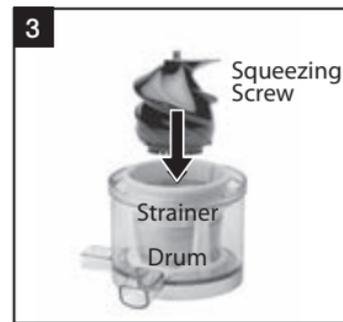


Push in the squeezing screw into the strainer.

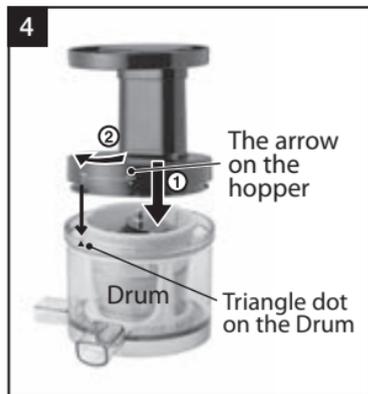

Assemble the hopper onto the Drum.

- ① Make sure the arrow on the hopper and the triangle dot on the Drum is aligned.
- ② Make sure the arrow on the hopper is pointing to close sign on the Main Body.

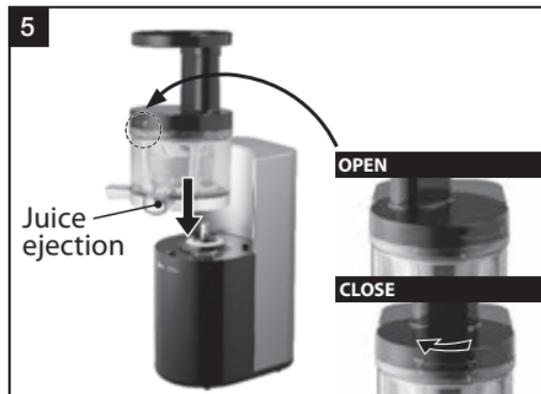

Assemble the entire Top set onto the Main Body.

- ① As shown below, assemble the Drum onto the Main Body and twist the Drum so that the hopper edge is pointing to "close" sign.

Assembly instruction-Type 1,2



Must connect power cord.


**Place containers under both ejections.
(Juice & Pulp ejection)**

Assembling rubber packing after cleaning

After cleaning, please plug back in the rubber packing as shown in below pictures.

Underneath the Drum, there is a yellow rubber pad which allows all the juice to only discharge from the fresh juice ejection.

The rubber pad is removable, Simply grab onto one side of the rubber pad and pull out.

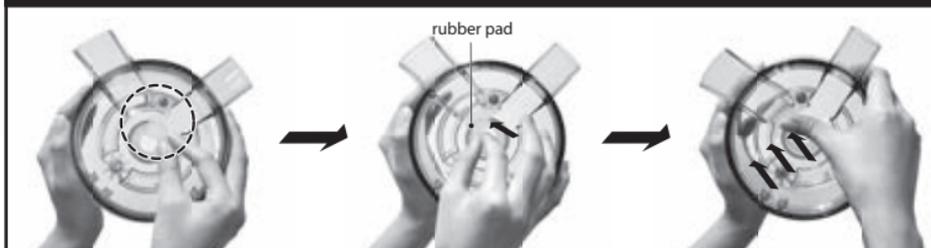

juicepresso
Smart Extraction System

How to use **juice**presso

Smart Extraction System



The machine has three(3) settings.

- ▶ “ON” starts motor, Start making juice.
- ▶ “REV” is reverse. Only use when something is stuck and you need to unclog.
- ▶ “OFF” is at center position. This allow the machine to turn off.



Please rinse everything thoroughly before putting into the machine.

After rinsing, put material into the machine using the pusher.
Please remove any hard seeds before using.



Turn off the machine after using.
Please dry your hands before touching the power switch.



Warning

Any unused juice should be refrigerated.
Do not operate with wet hands.
Do not pre-operate before inputting materials or
Do not operate with an empty Drum.

Warning while operating



Do not use longer than 20minutes at a time.

Violating the warning may cause serious damage to the product.



Remove any hard seeds.

Violating the warning may cause serious damage to the product especially the screw.



Do not use anything as a pusher (fork, chopsticks, spoons, etc) other than the pusher itself.


Violating the warning may cause serious damage to the product.



Do not operate with wet hands.

Violating the warning may cause serious injuries or electrocution.

When the machine is stuck and not operable, please..

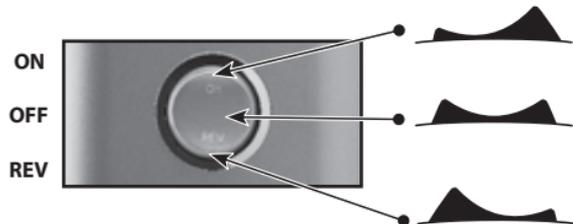

Turn off the machine and put it revers for few seconds then try operating again.


When reverse switch does not work, turn off the machine and reassemble following the instructions given. After reassemble, please try turning on the machine.



Please reassure the switch is completely dry before operating.

How to disassemble and clean

1 Turn machine "OFF".

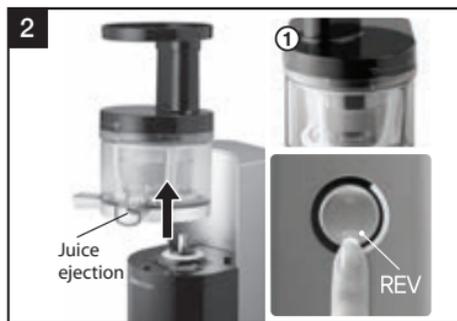

Twist the hopper to unlock by grabbing the two ejections. Make sure the arrow is aligned with the open sign before pulling off the Drum.



Order to disassemble.

1. Hopper
2. Squeezing screw
3. Strainer
4. Spinning brush
5. Drum



Use the brush to clean thoroughly after operating.

5 Do not rinse the Main Body with direct water, use dry towel or wet towel to clean.

6 Please dry the attachments after cleaning.



Please use smooth wet towel for cleaning.

Please do not use dish washer or high temperature cleaner for cleaning.

Before requesting service

Check these points before requesting service.

The product does not work.

Make sure that your Juice presso is plugged in.
Make sure that your Juice presso is correctly assembled as described in this user manual (refer to pages 6 ~ 7).
The operation may be stopped if you use your Juice presso continuously for 20 minutes or more (refer to page 9).
Contact your local customer service.

The juice is either too thick or too liquid.

Make sure that the rubber packing is assembled correctly.
- Refer to "Assembling the rubber packing after cleaning" on page 7.
Ensure that you are using fresh ingredients.
- If you want to use ingredients that are no longer fresh because they have been stored in the refrigerator for a long time, use them after soaking them in mineral water for 10 minutes or more.

The drum cover does not open easily.

Grab the bottom of the hopper and turn it counter-clockwise when it is assembled to the body.

The product stops while operating.

Ensure that you are not adding too many ingredients.
Ensure that you are not adding ingredients with too many hard seeds.
- Press the REV button for 2 to 3 seconds and then press the ON button again.
If you have tried the step above, and the Squeezing Screw does not rotate, stop using the product, disassemble and clean it, and reassemble and use your Juice presso again.
The operation may be stopped, if you use your Juice presso continuously for 20 minutes or more (refer to page 9).

The product is noisy while juicing.

The noise may increase depending on the ingredients being juiced.
- You can continue to use your Juice presso as this is simply the sound of the ingredients being juiced.

The drum vibrates.

You can continue to use your Juice presso, as it is normal that the drum vibrates a bit.

If you want to use your Juice presso repeatedly, pause it for 1 hour or more and then continue to use it.

Product specification



Specification

Product Name	Juice presso	
Model Name	CJP-01	
Voltage	220 V - 240 V	
Frequency	50 Hz	
Power Consumption	150 W	
RPM	40 Rpm (at 20N.M)	
Electrical cord length	4.592 ft +	
Motor	DC Motor	
Weight	14.109 lbs	
Dimensions	Width	55.11 in
	Length	76.18 in
	Height	163.42 in
Standard usage time	Less than 20 minutes continuously	

Coway

Smart Extraction System
juicepresso
CJP-01

Customer Service: <http://www.coway.com>